

Coupling Options: Ways to Connect to Assistive Listening System Audio

Listener Access (How you receive the sound)		Telecoil (Built-In)	Auracast (Built-In)	Receiver + Neckloop	Receiver + Streamer	Receiver + Headphones or Earbuds	Phone (App or Wi-Fi)
Venue System (How the venue sends the sound)							
Hearing Loop	✓				✓	✓	
Auracast Broadcast (Bluetooth LE Audio)		✓	✓	✓	✓	✓	✓
FM System			✓	✓	✓	✓	
Infrared System			✓	✓	✓	✓	
Audio Over Wi-Fi			✓	✓	✓	✓	✓

Audio over WiFi and streamers add latency that may prove challenging in some situations.

To receive audio from a hearing loop or a neckloop connected to a receiver, hearing aids or cochlear implants must be equipped with a telecoil.